

## **COMPUTER USE**

APPROXIMATE TIME FOR SETUP: 10 minutes

### To Start:

1. Turn projector on by pushing the power button on the remote control. (The projector should emit a blue light out of the front lens).
2. Plug the data, sound, and monitor cable from the cabinet into your computer.
3. Turn on the power switch located on the top shelf in the cabinet.
4. Push the COMP (which stands for computer) button found in the electronics cabinet. (The light underneath the COMP button will light up green.)
5. Push the Fn key and then the F8 key to get computer projection onto the screen. (Computer image should now be seen on the screen, if not, press the two keys again to toggle it once more.)

### To End:

1. Turn off the power switch located on the top shelf in the cabinet.
2. Unplug the data, sound and monitor cable from your computer.
3. Turn the projector off by pushing the power button on the remote control. (The screen will now show the phrase: Power Off? Please press the power key again to power off.) Push the power button again.

### Troubleshooting Tips:

- No Image on Screen:
  - Check to make sure that the projector is on.
  - Check to make sure that the power button is turned on in the electronics cabinet.
  - Check to make sure that the computer is on and the monitor cable is plugged in to the cabinet.
  - Press Fn and F8 one more time to toggle the image to the screen.
  - Ensure that one of the input buttons on the cabinet are selected (i.e. Comp. for computer projection or VCR for video or cable)
  - Check to see if the horizontal shift button (located on the bottom shelf in the electronics cabinet) to see if the image is shifted off the screen either way to the left or right. Twist the knob to bring the image to the center.
- Projector not responding:
  - If you turned the projector off and want to turn it back on again, you must wait 3-5 minutes for the projector to cool down and then restart. Be patient. In general, don't turn off the projector unless you are certain.